



INSTRUCTION MANUAL



RACK MOUNTABLE, CASCADABLE VGA UTP EXTENDED 1x4 SPLITTER



1



2



3



4



5




6



7

Included in the package:

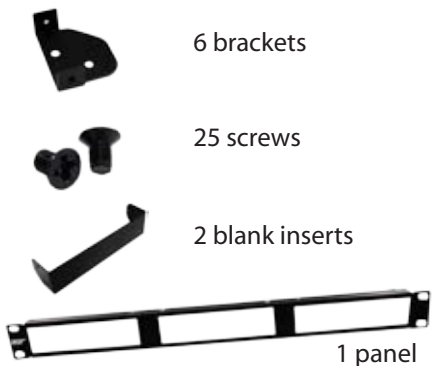

6 brackets

25 screws

2 blank inserts

1 panel

P/N: R02-SPL-C5E-104B

Step-by-step Instruction Manual:

1. Place bracket to the local unit
2. Screw the bracket to the local unit
3. Align local unit to the panel
4. Screw local unit to the panel
5. Attach the VGA cable to local unit
6. Attach the RJ45 Cable from local to remote Unit
7. Plug the power to local unit



Tri-Net Technology, Inc.
Total Network Telesis **U.S.A.**

21709 Ferrero Parkway
Walnut, California 91789
Tel. 909 598 8818 Fax. 909 594 8666
www.trinetusa.com info@trinetusa.com